Square Craftsman PermaCast® Column

10-1/4"x7-1/2"x7'

Tuscan Cap & Base

SKU: Col.-70061007PL Cap/Base-7062101002

Product Material: FRP

Notes

- Tolerances: +/- 1/4" in all dimensions
- Whole columns must have 75% contact at the top and 100% contact at the bottom. For split columns, leave a 1/2" - 1" gap between the top of the column and the header. See Installation Instructions.
- Column must be primed and painted after installation on jobsite. If column is not primed and painted it will turn a yellowish color due to UV rays. DO NOT paint columns using dark colors (dark colors are considered any color that falls within the L values of 56 to 0). Follow paint manufacturer's instructions for priming and finishing of fiberglass composite column and polyurethane cap and base.
- 10-1/4"x7-1/2" square craftsman PermaCast column has a concentric load bearing capacity of 10,000 lbs & an eccentric; average allowable load of 7,000 lbs. Once the column is split it has NO load bearing capabilities.
- Top of column is attached to header with a flashing cap. Bottom of column is attached to substrate with 'L' brackets.
- Column inside dimensions:
Top: 7"
Bottom: 9"
Inside dimensions have an 1/4" tolerance
Neck mould is not applied and installed during column installation.

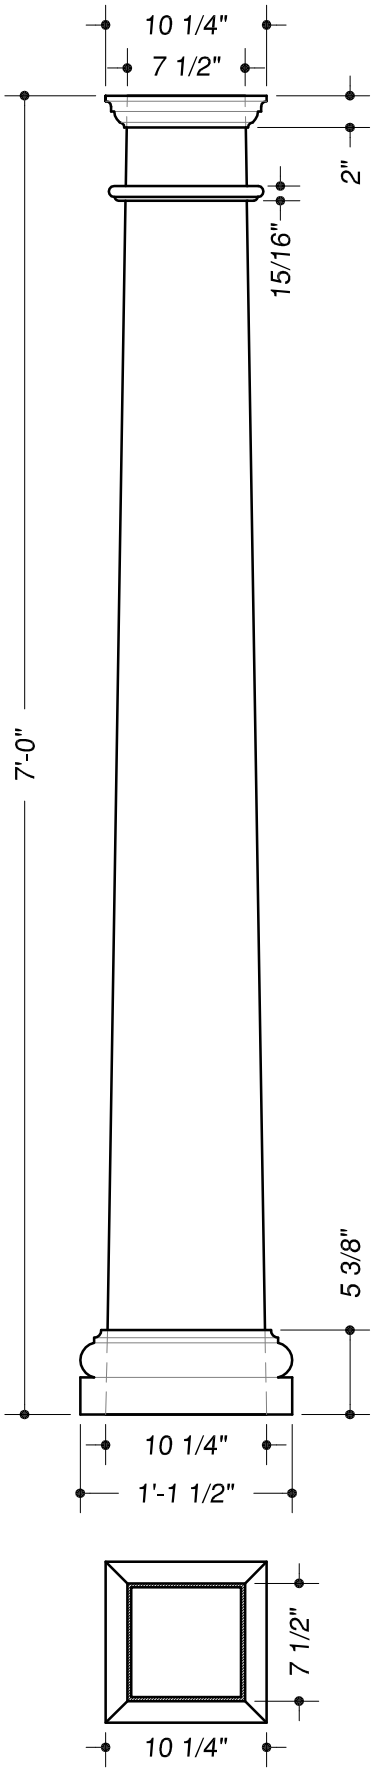

Drawn by: CAG
Date: 25 March 2019
Scale: NTS

HB&G Building Products
1015 Brundidge Blvd.
P.O. Box 589
Troy, Alabama 36081
334.566.5000
Fax 334.566.4626
www.hbgcolumns.com